




S3 BEST PRACTICES


IMPROVE S3 RESULTS AND CONSISTENCY

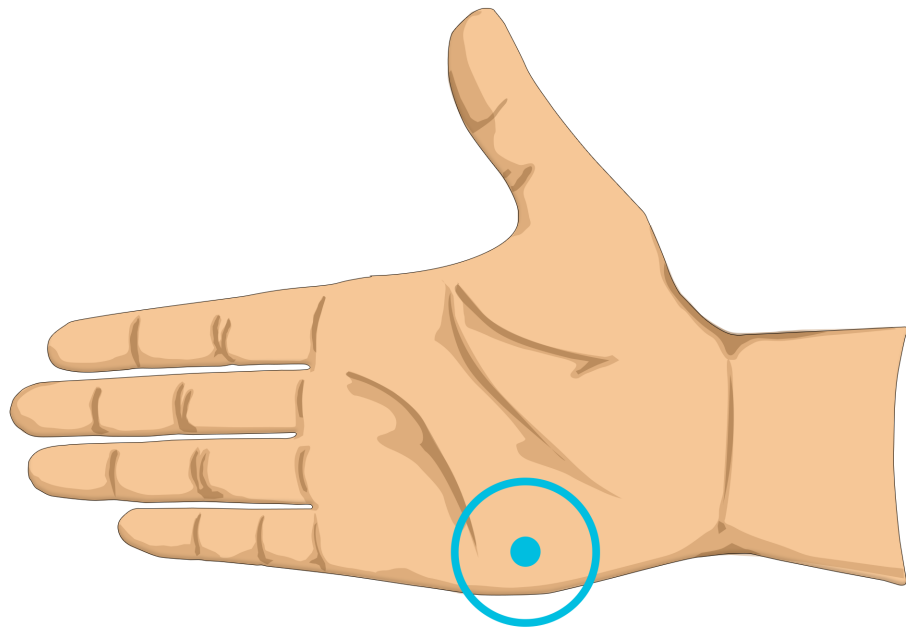

POSITION

SCANEE SHOULD:

- SCAN BETWEEN THE HEART AND HEAD LINE
- SCAN THE SAME SPOT ON THE HAND EACH TIME
- CUP THE NOSE OF THE SCANNER

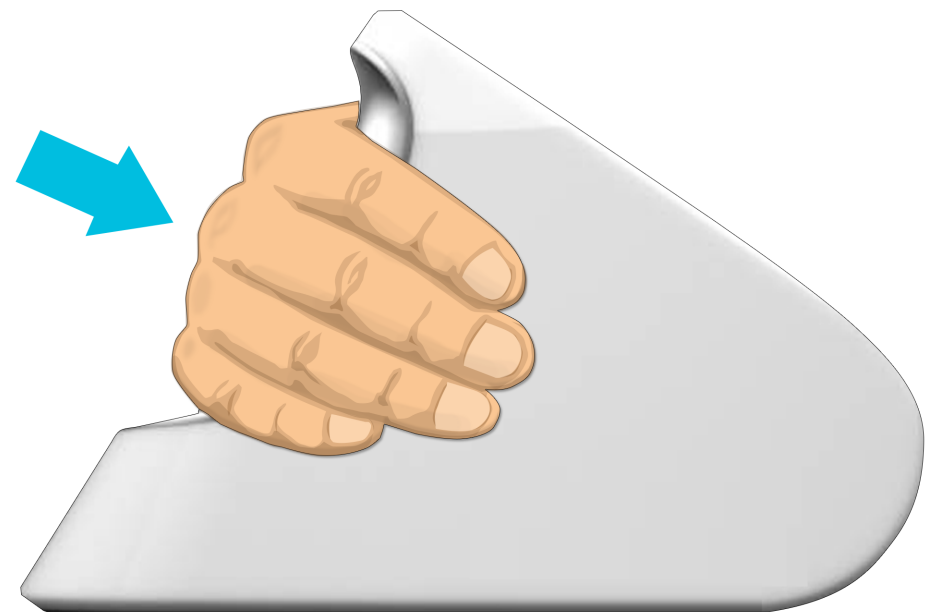

PRESSURE

SCANEE SHOULD:

- REST HAND ON THE PROBE
- DO NOT PRESS TOO HARD
- APPLY THE SAME AMOUNT OF PRESSURE EACH SCAN